



ASSEMBLY INSTRUCTION

#70619 UNDERBED CURTAIN

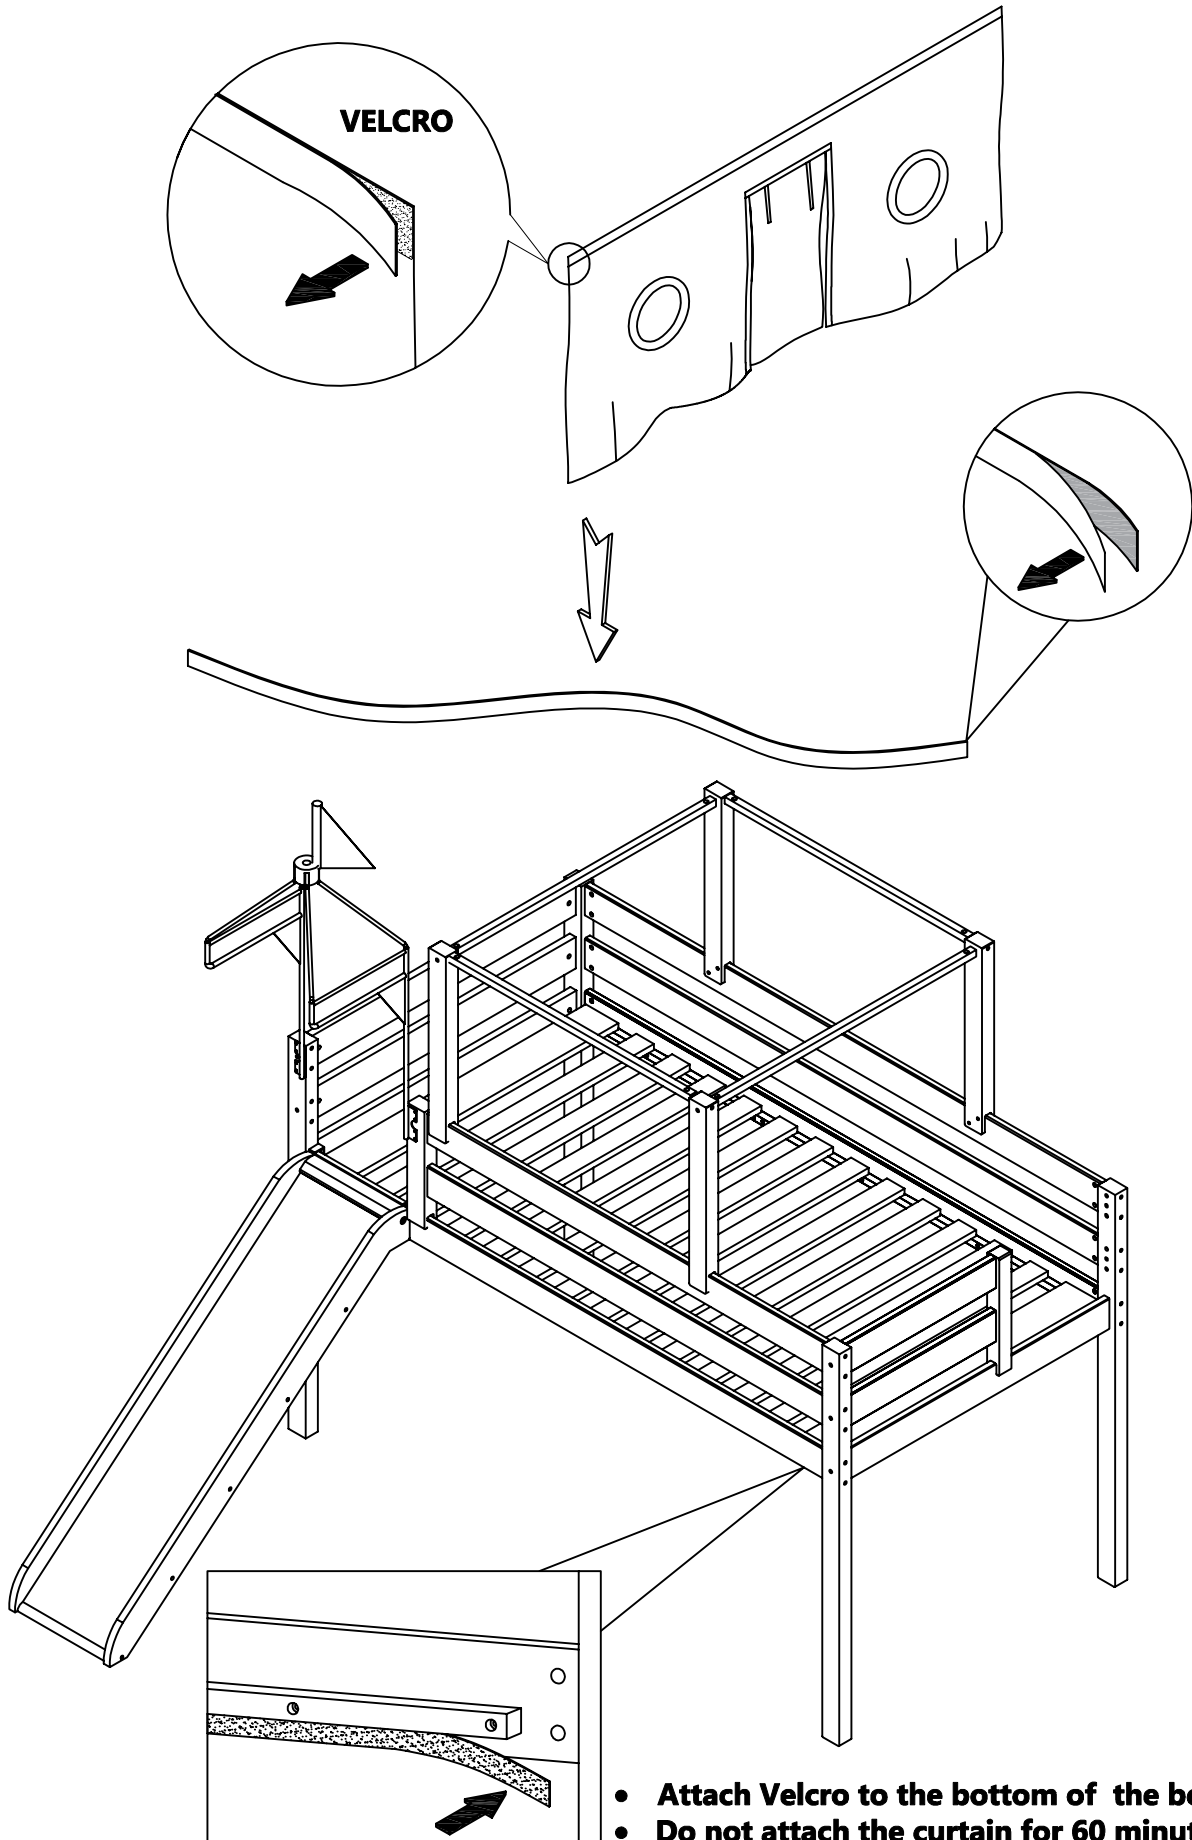

ASSEMBLY INSTRUCTION



#70619 UNDERBED CURTAIN

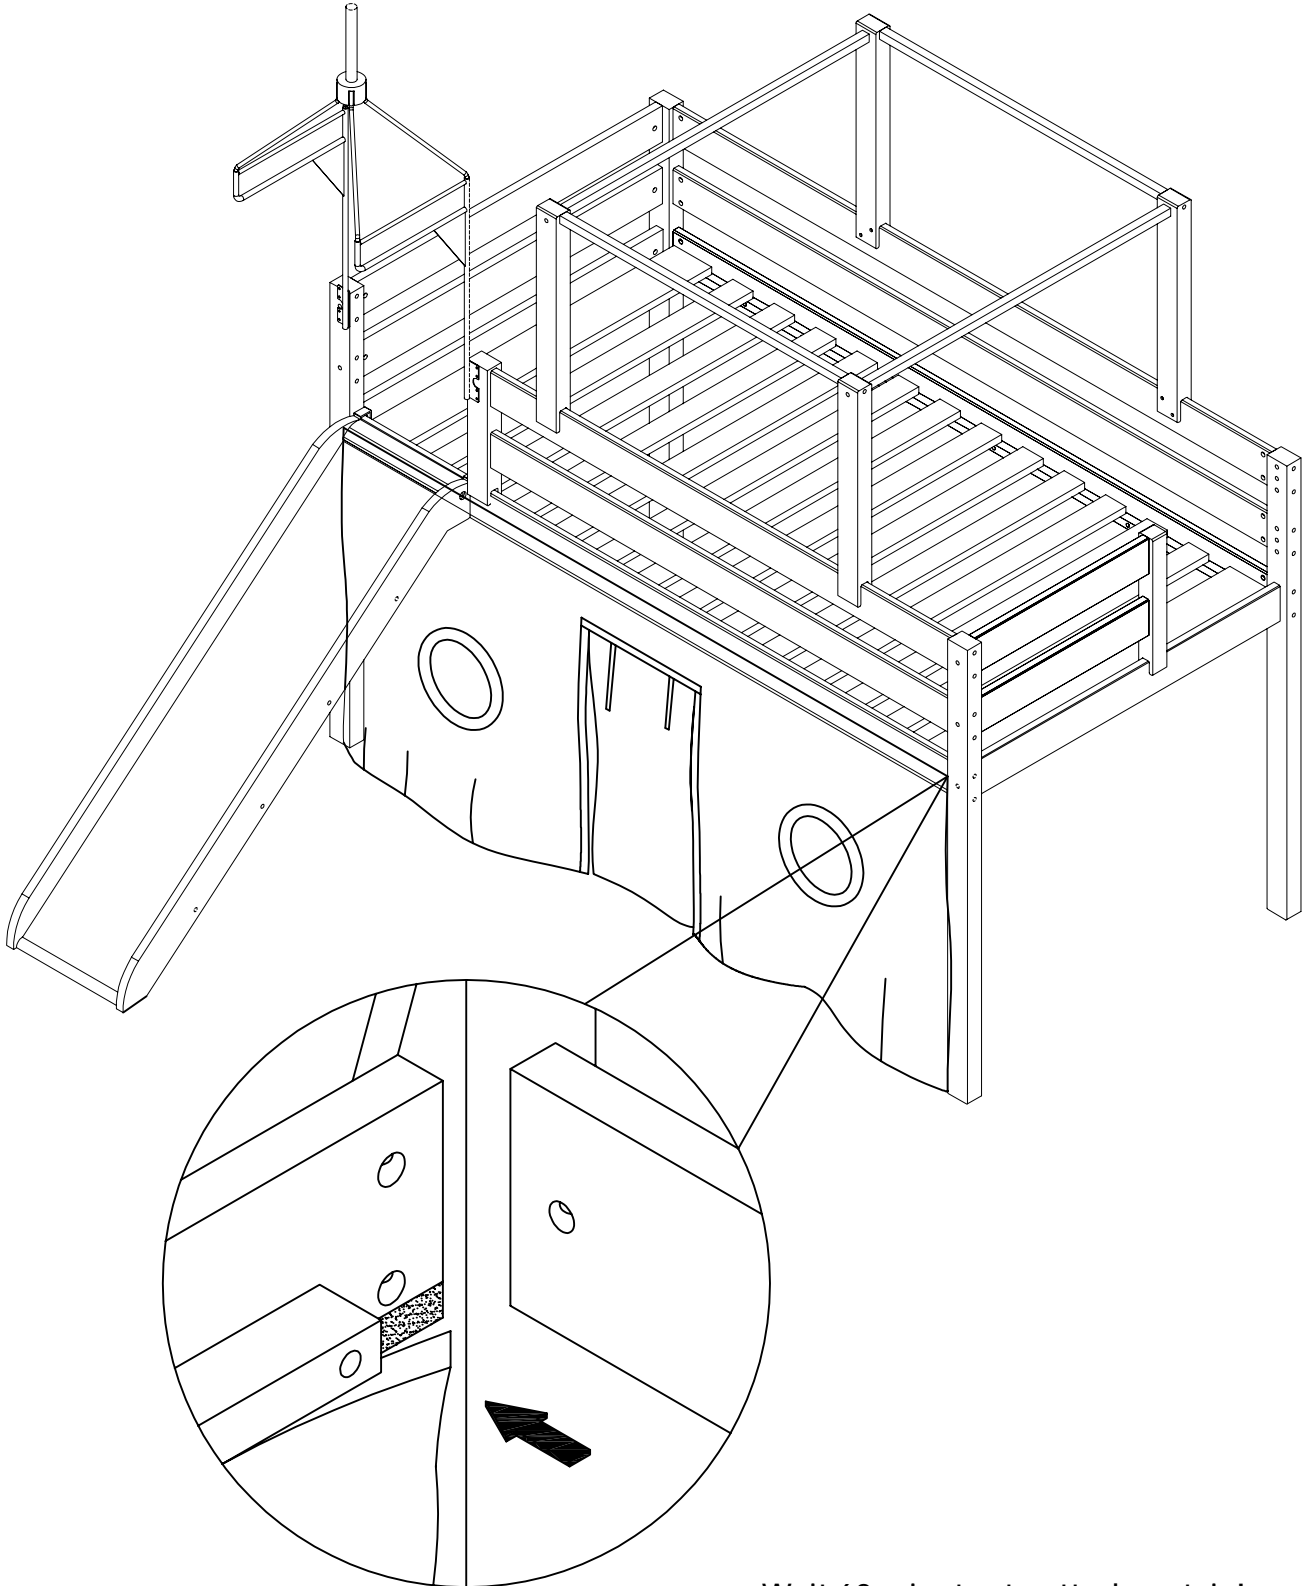

Wait 60 minutes to attach curtain!

ASSEMBLY INSTRUCTION



#70619 END CURTAINS

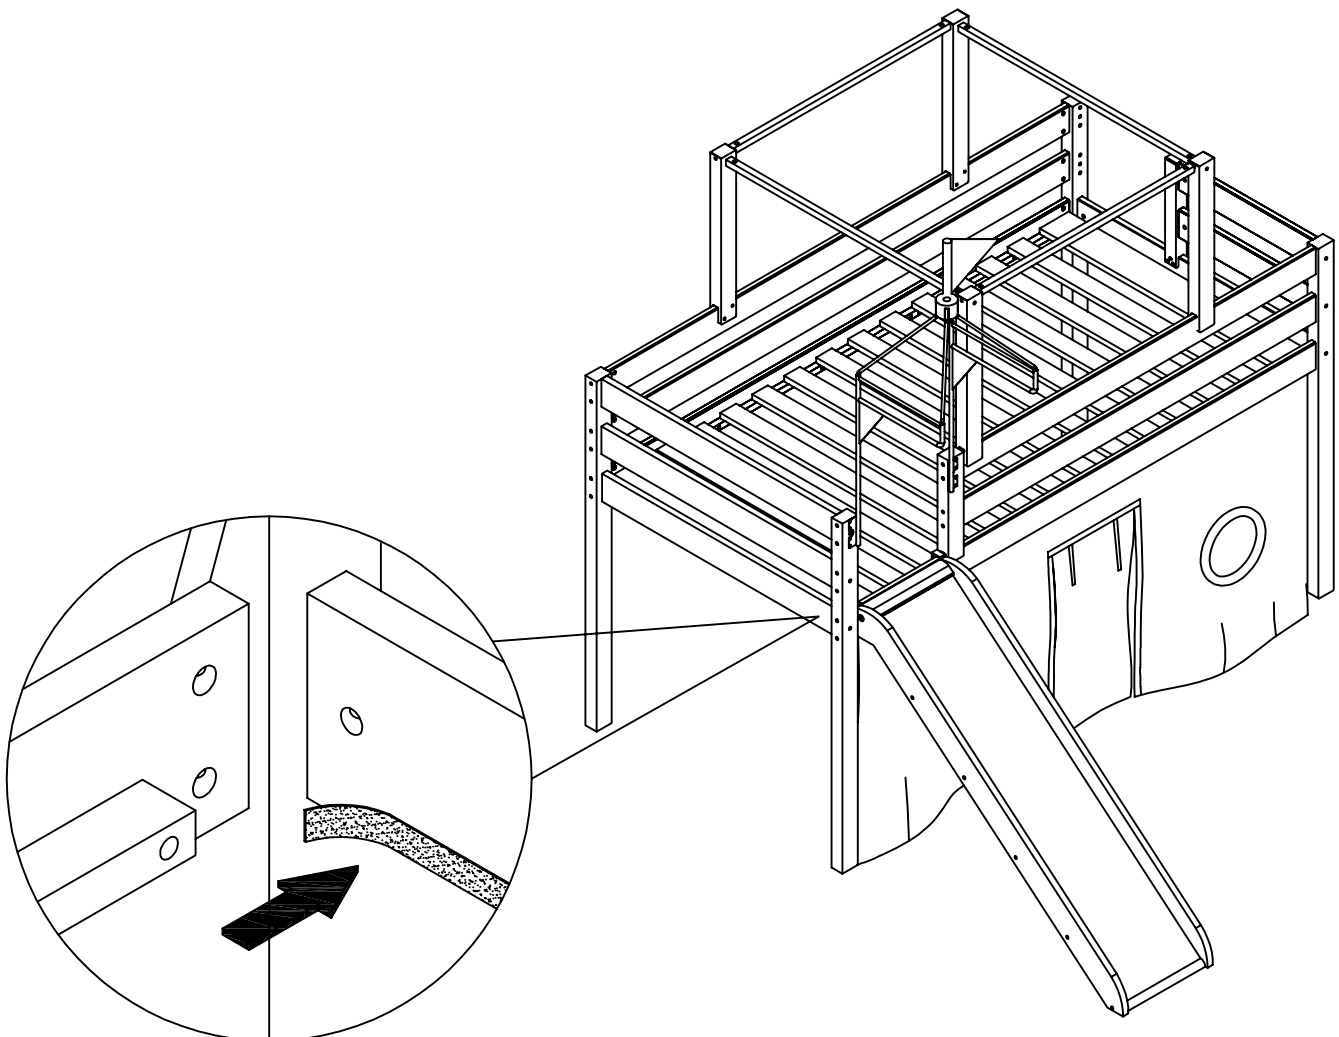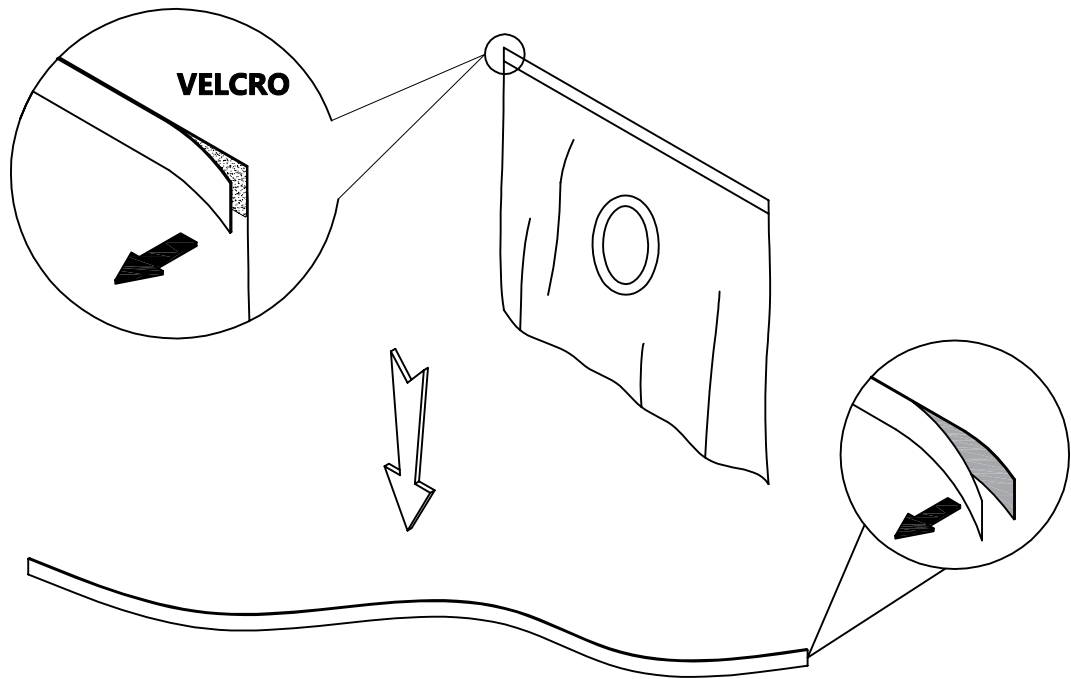

- **Attach Velcro to the bottom left or right bed end.**
- **Do not attach the curtain for 60 minutes!**

ASSEMBLY INSTRUCTION


#70619 END CURTAINS

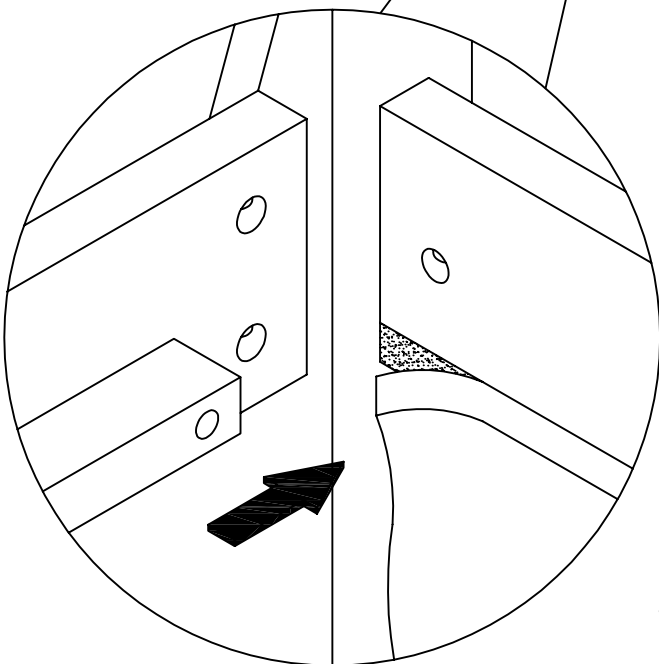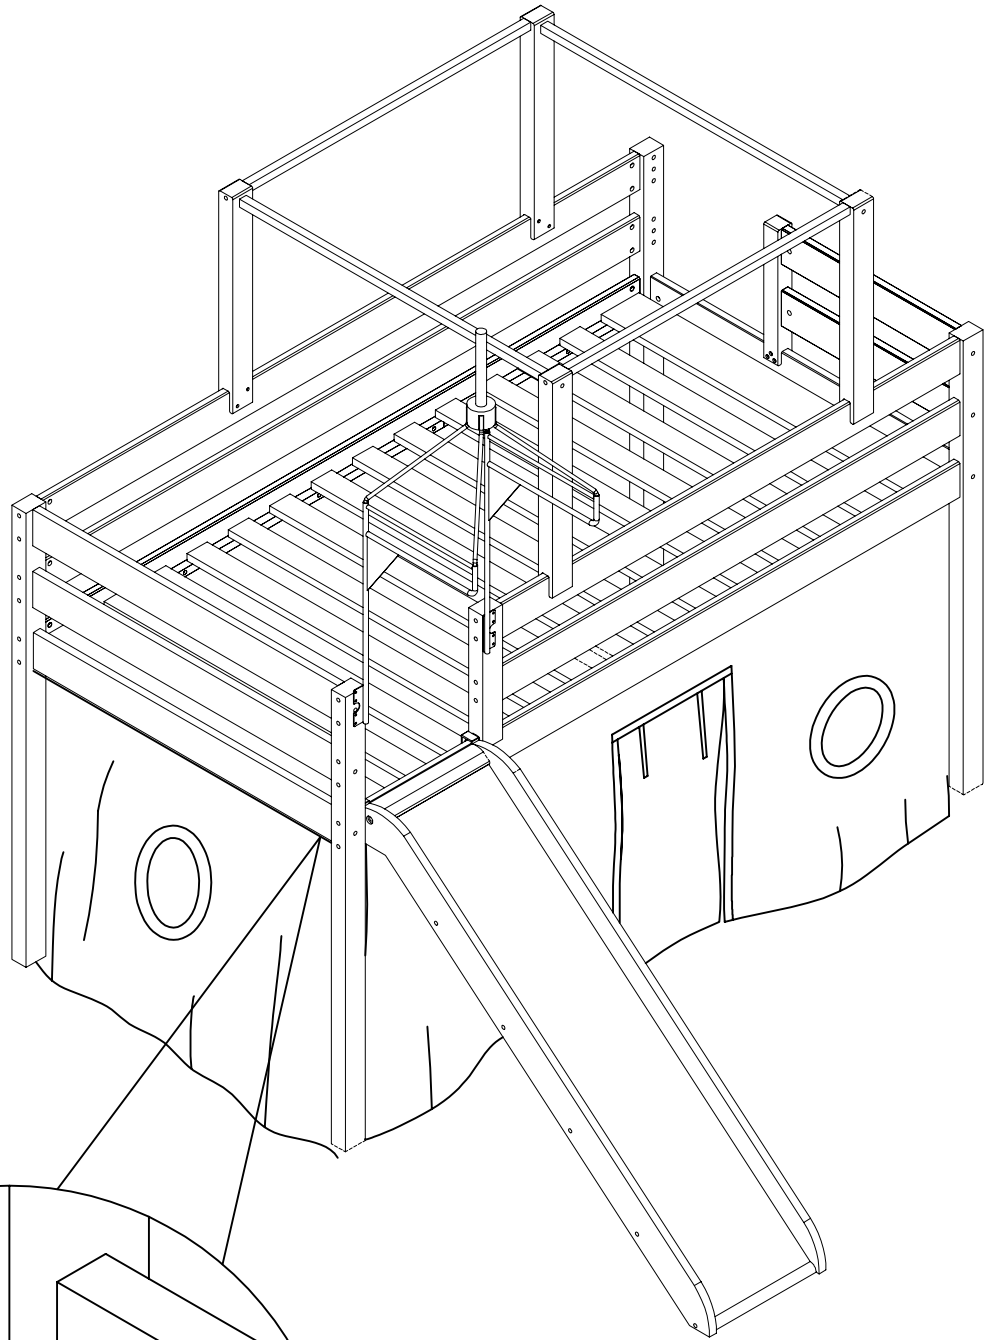

Wait 60 minutes to attach curtain!

ASSEMBLY INSTRUCTION

#70619 TOP TENT FABRIC

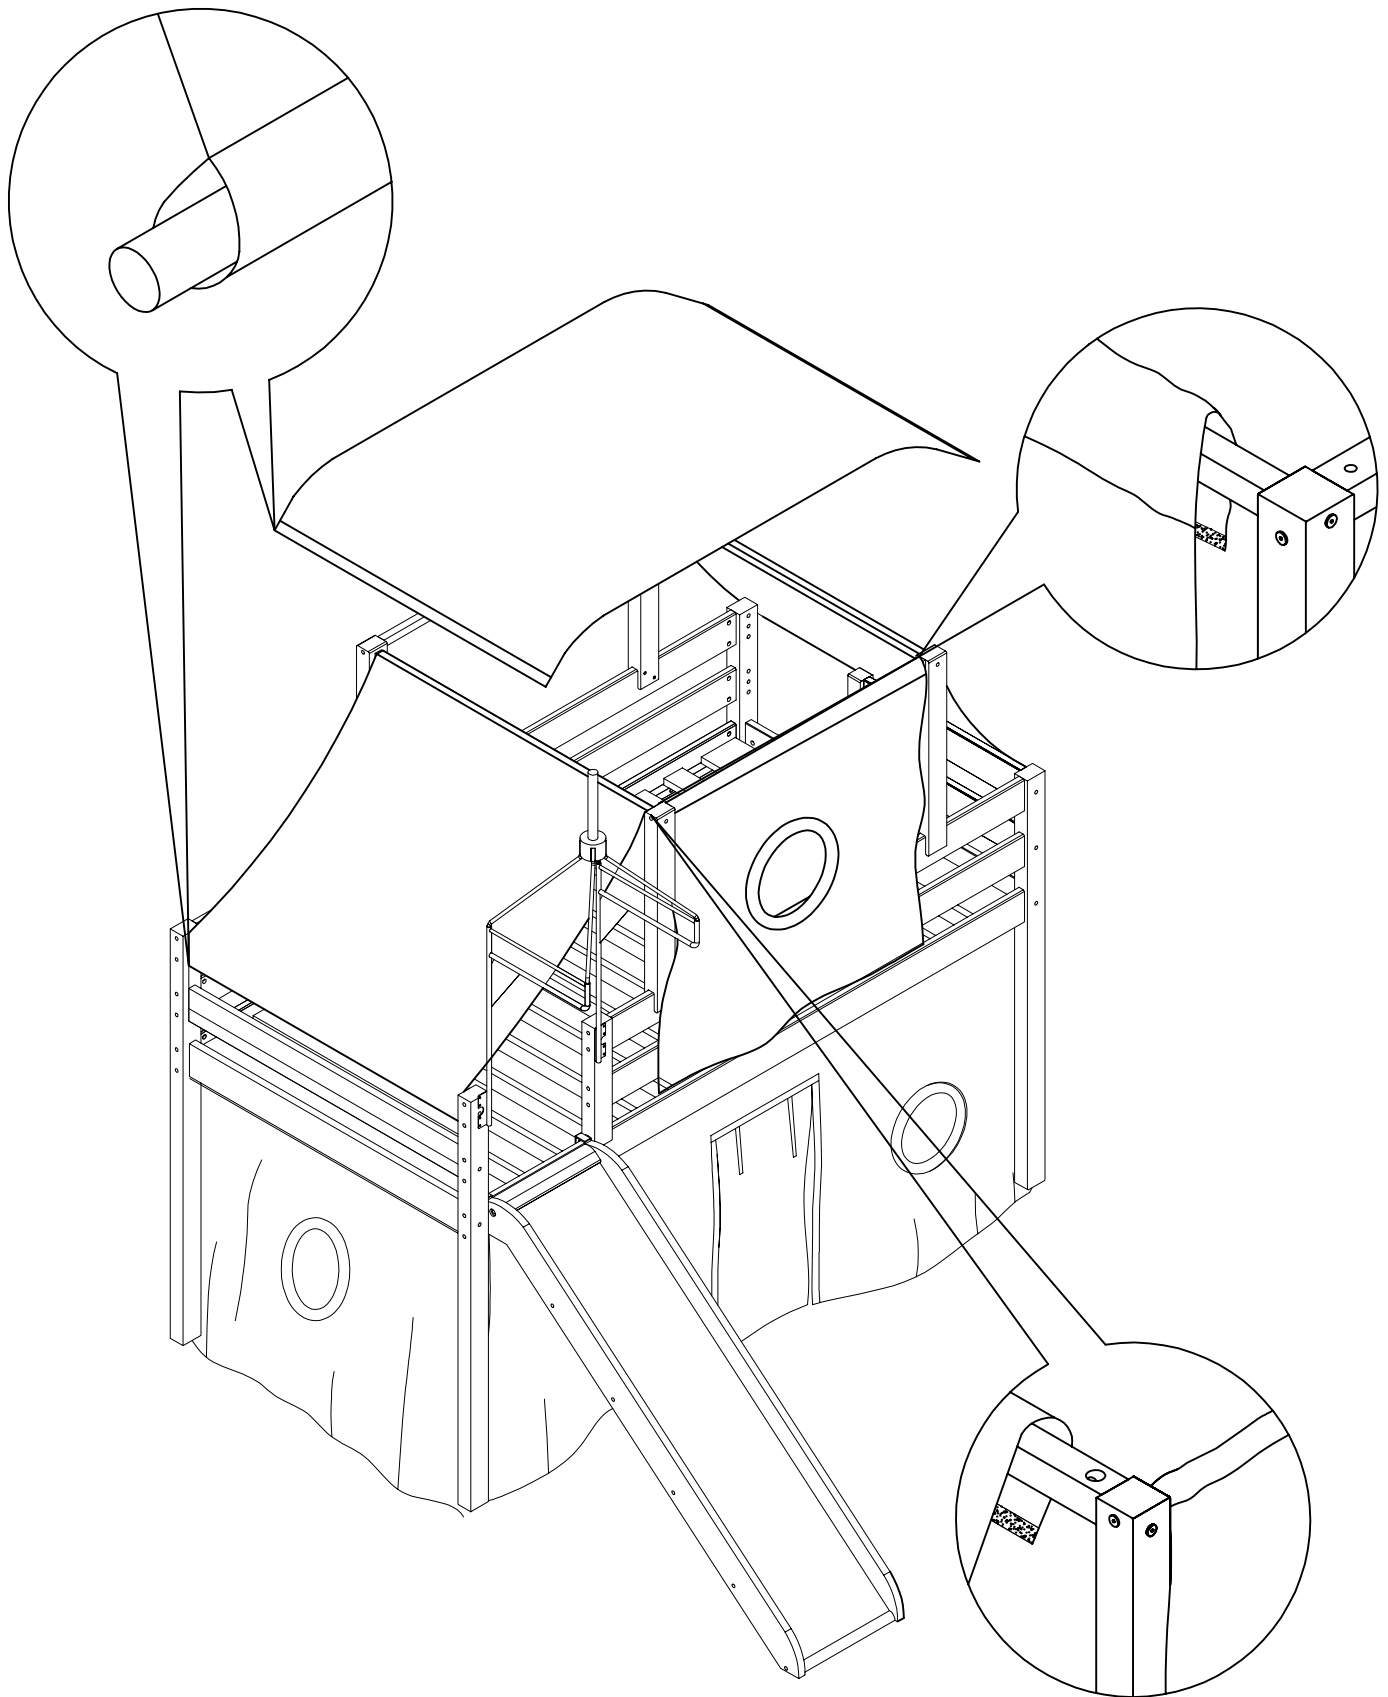

ASSEMBLY INSTRUCTION

#70619 TOWER FABRIC

